

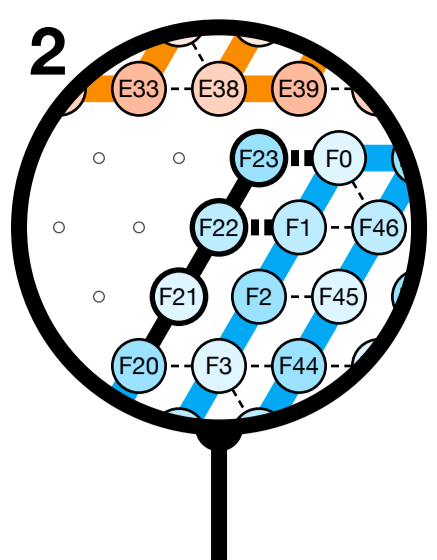
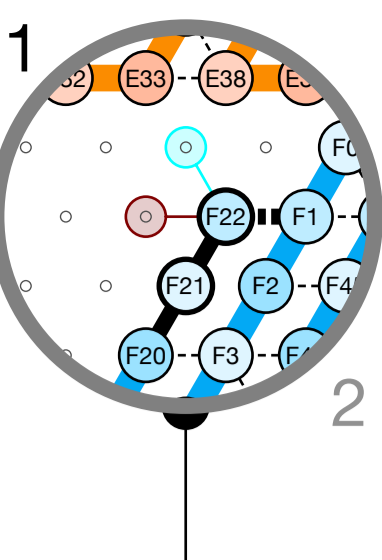
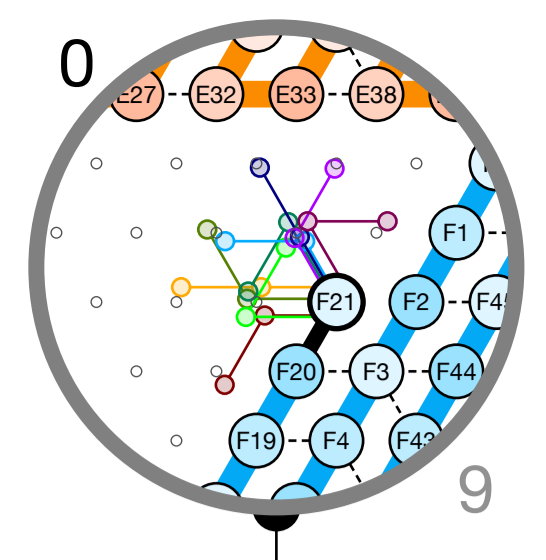
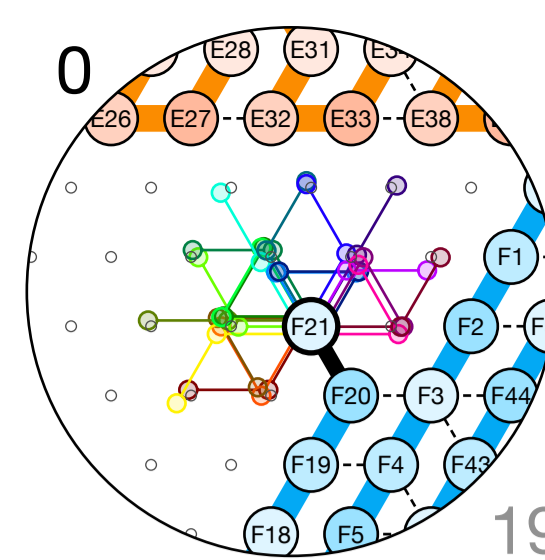
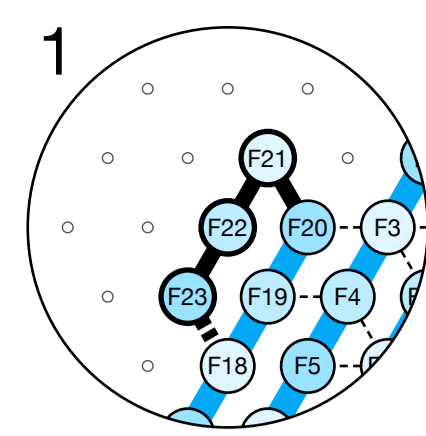
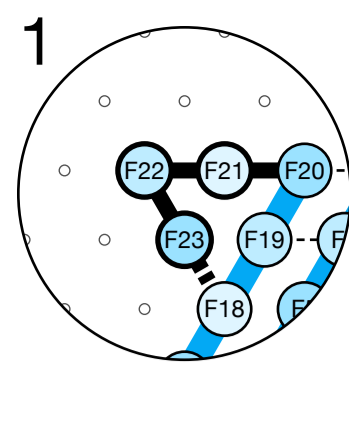
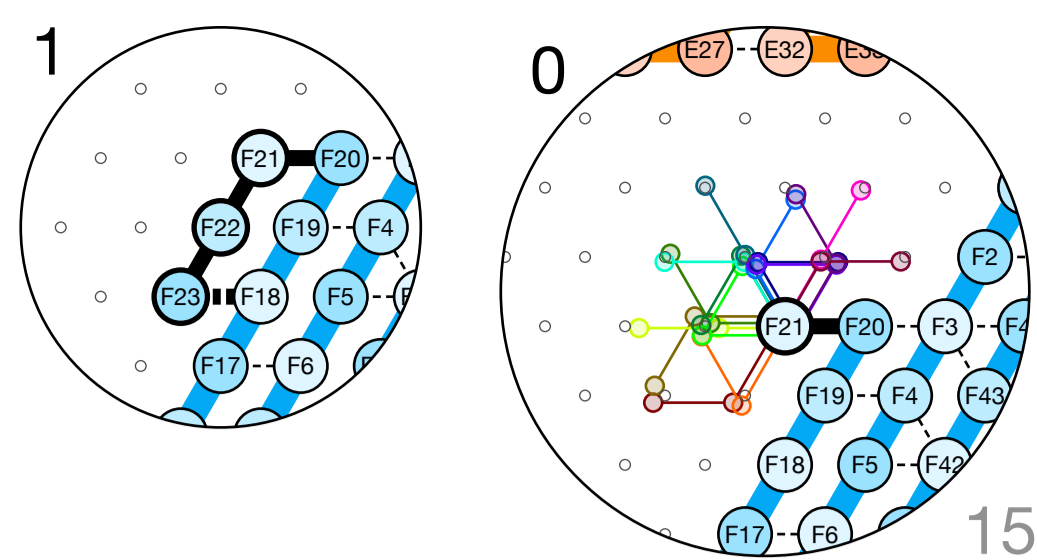
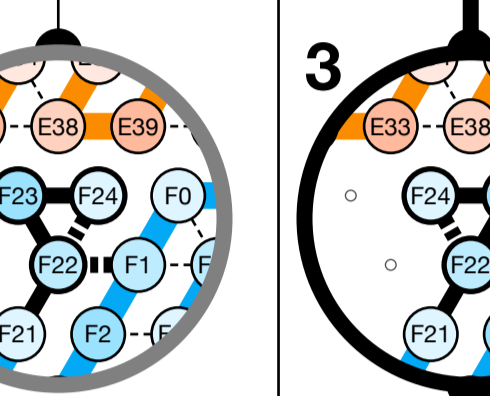
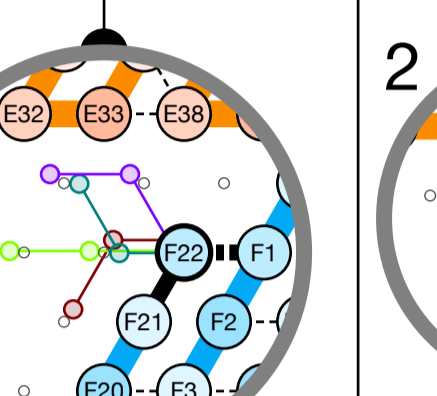
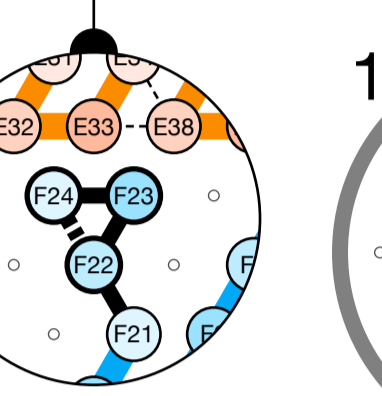
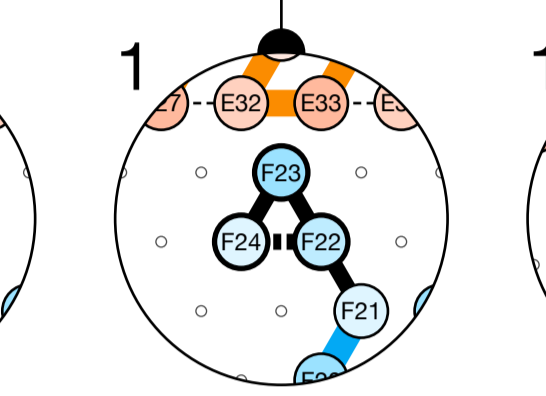
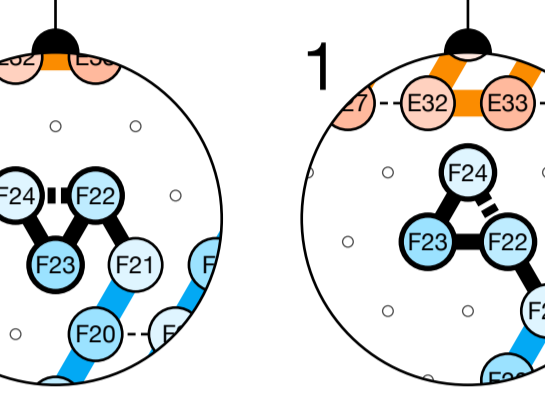
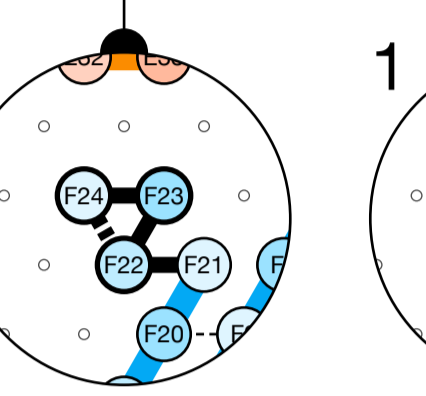
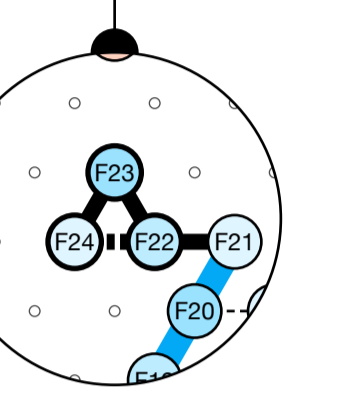
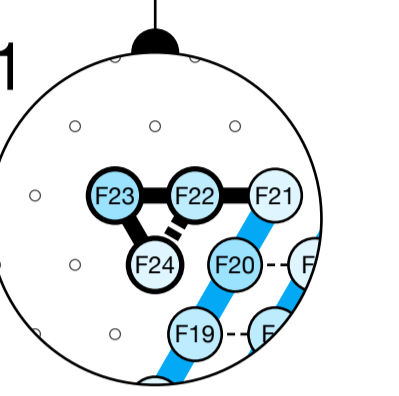
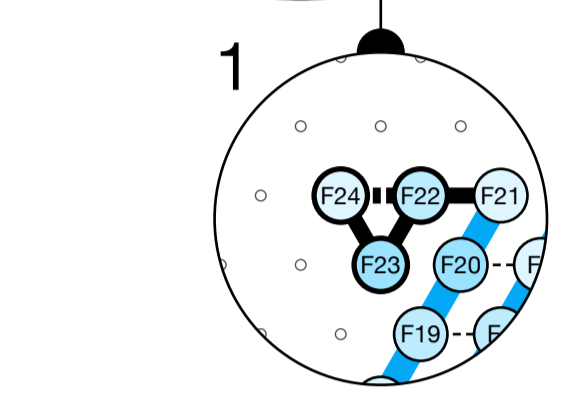
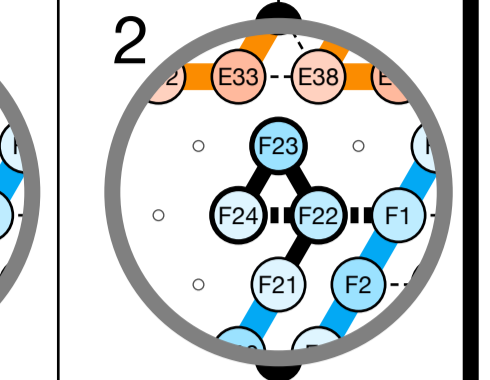
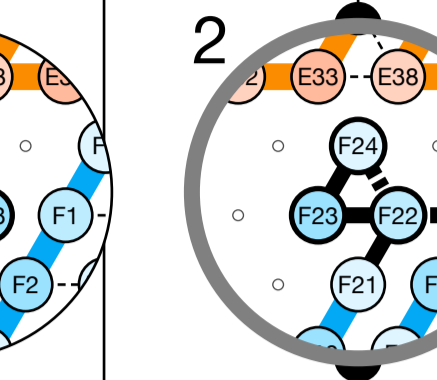
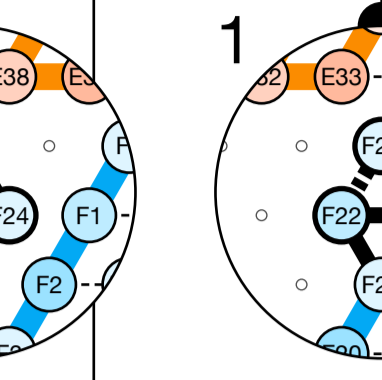
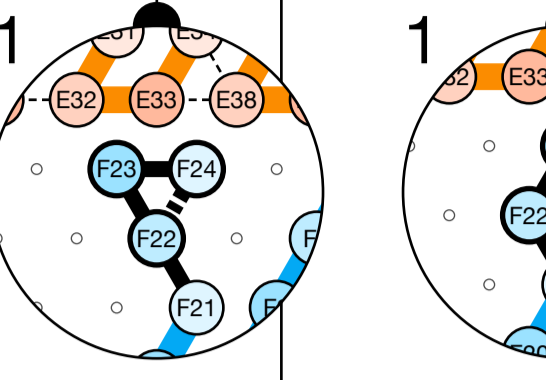
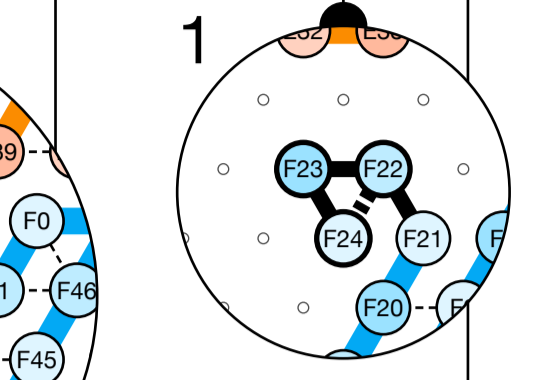
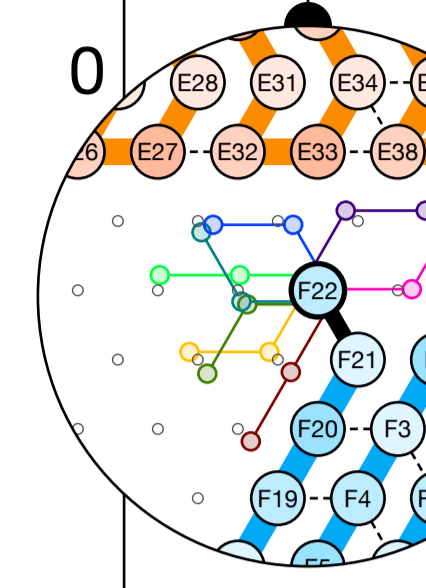
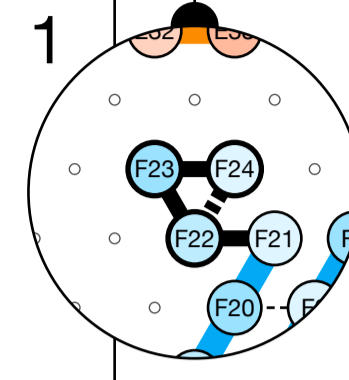










3950
E: Padding
Bead F21

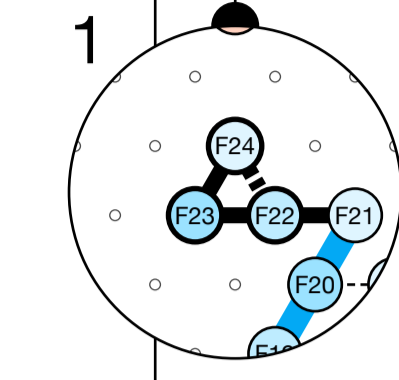





3951
E: Padding
Bead F22

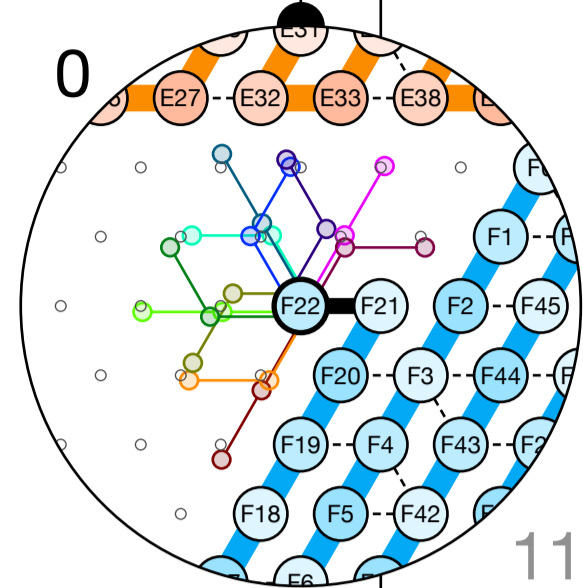









3952
E: Padding
Bead F23

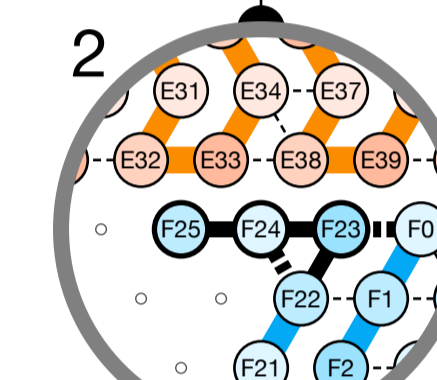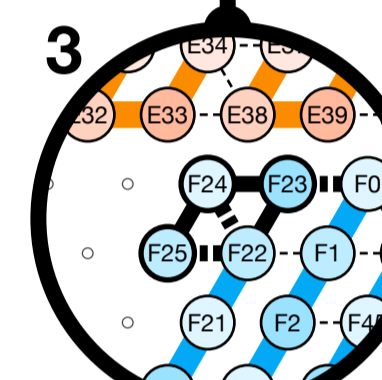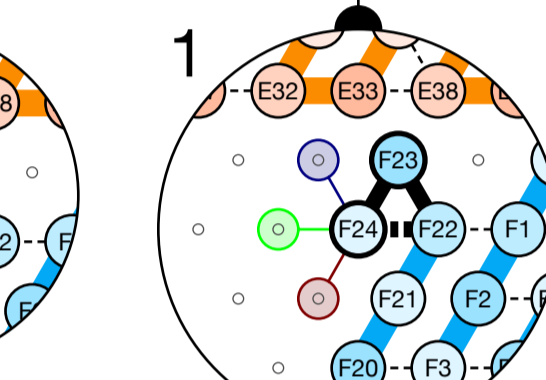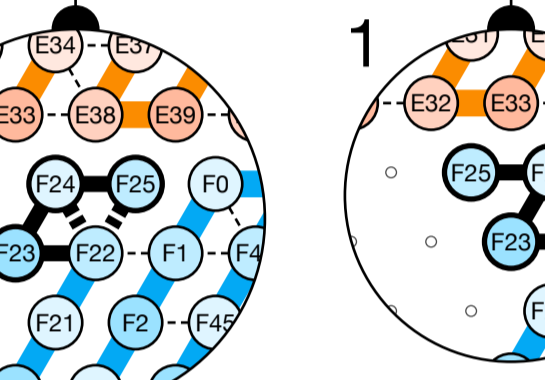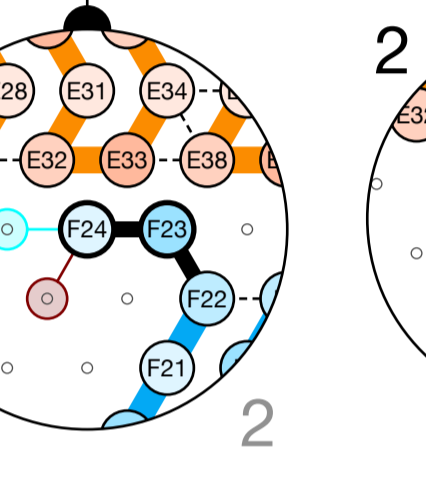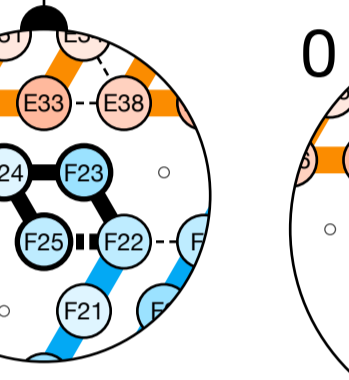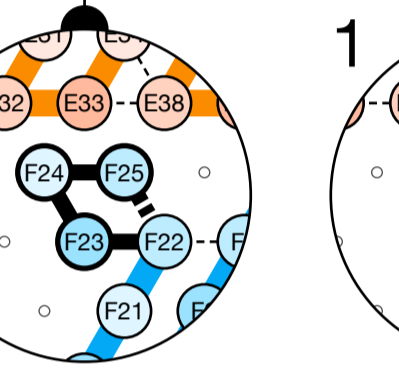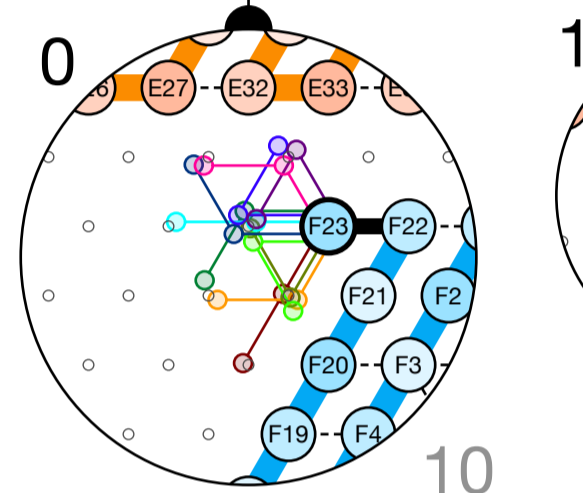







3953
E: Padding
Bead F24

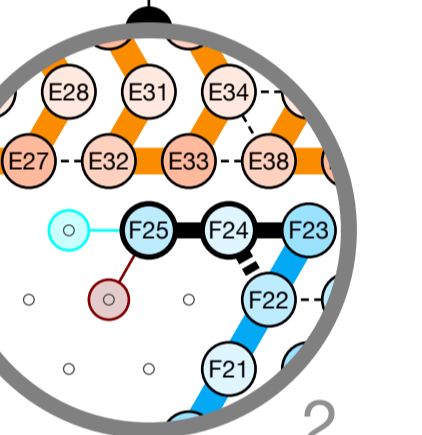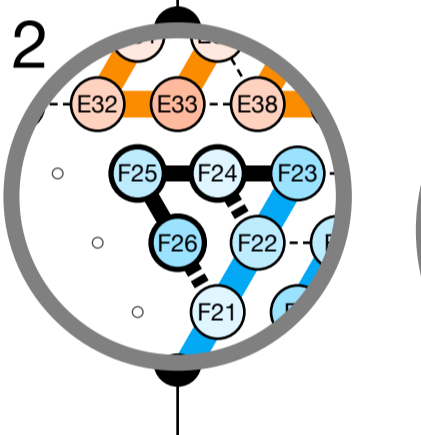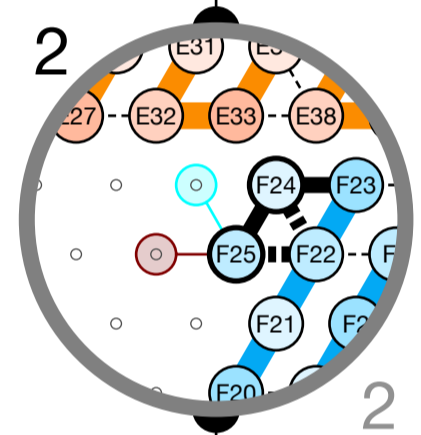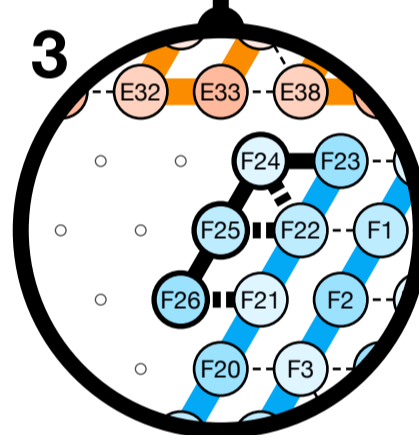











3954
E: Padding
Bead F25

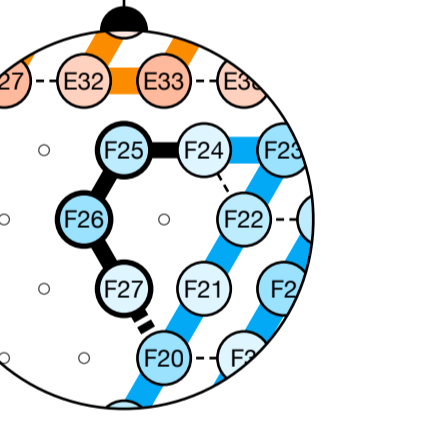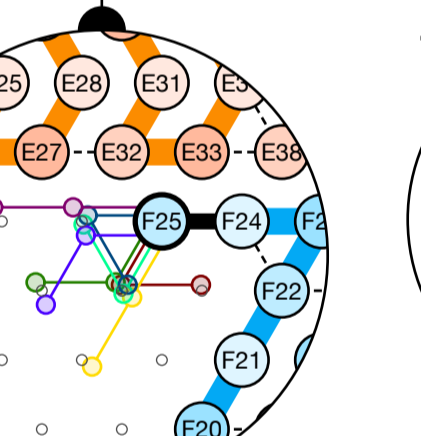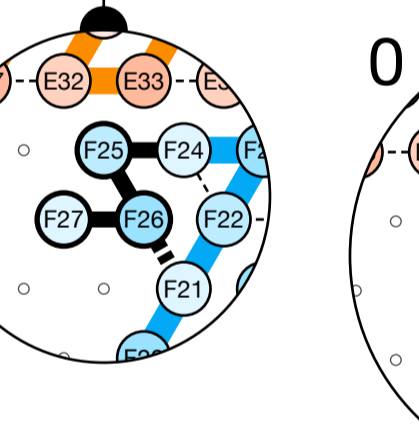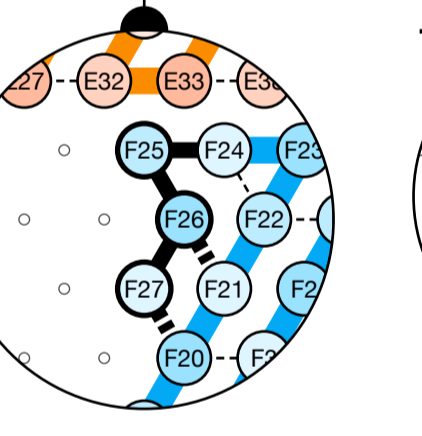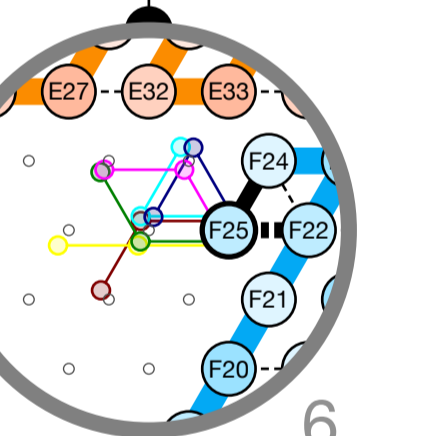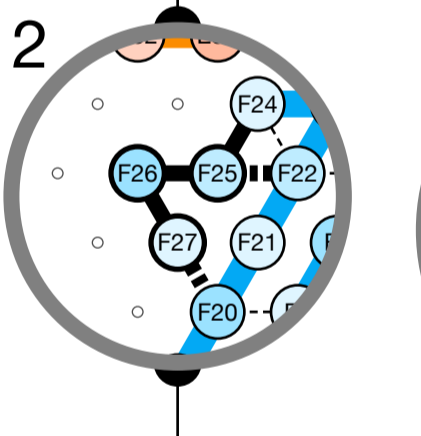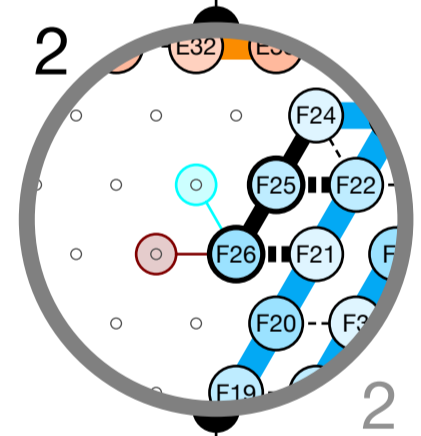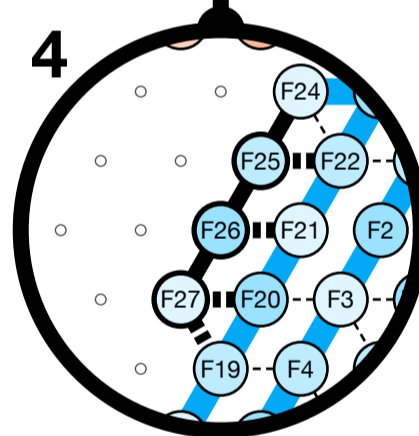







3955
E: Padding
Bead F26

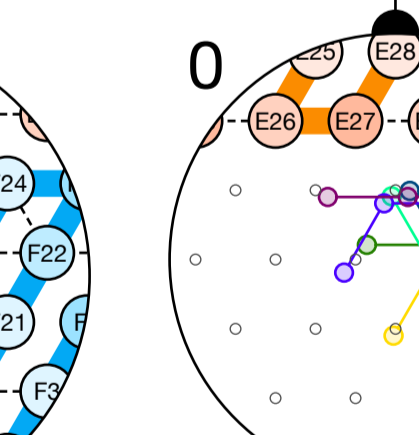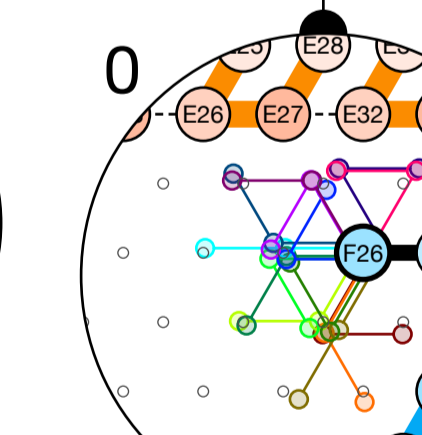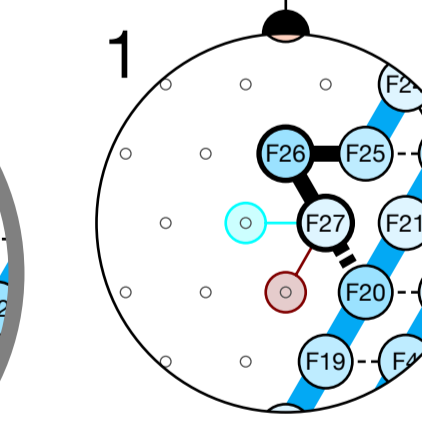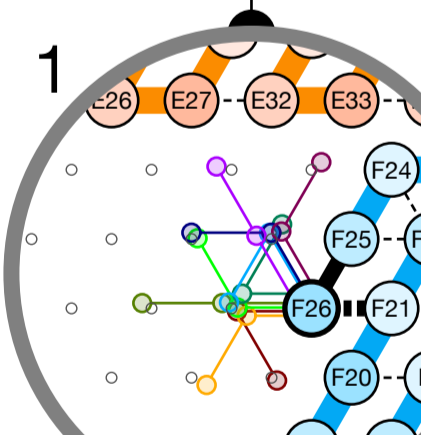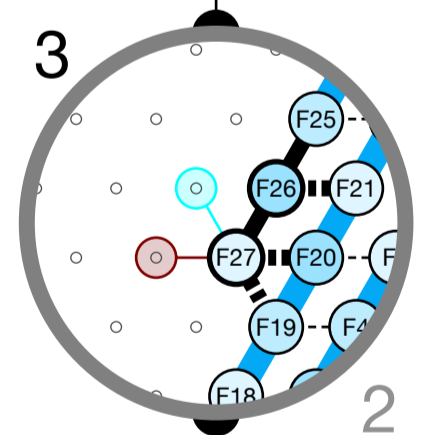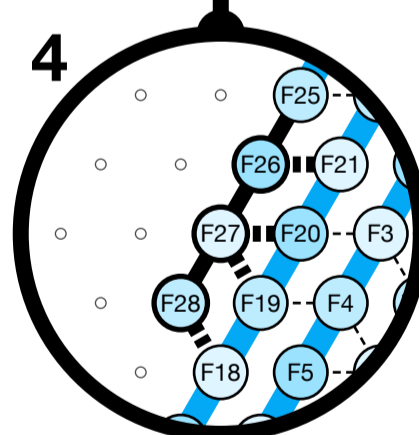

3956
E: Padding
Bead F27

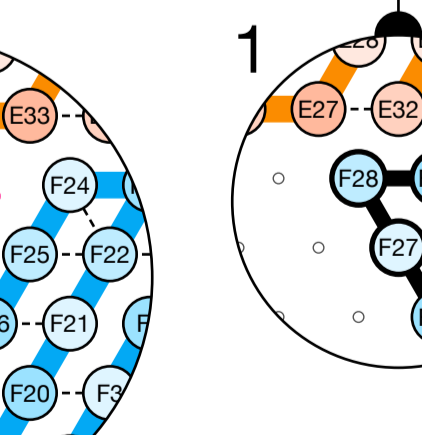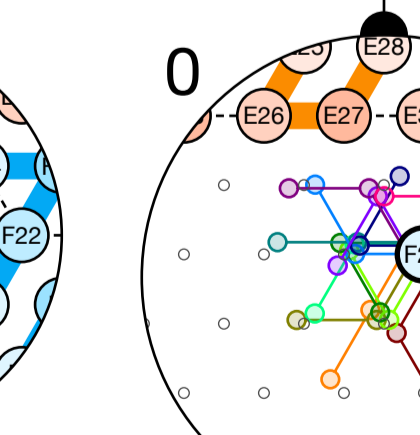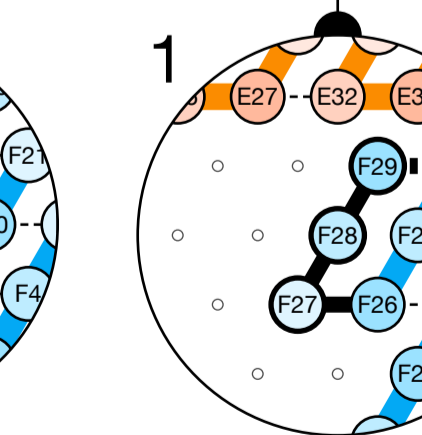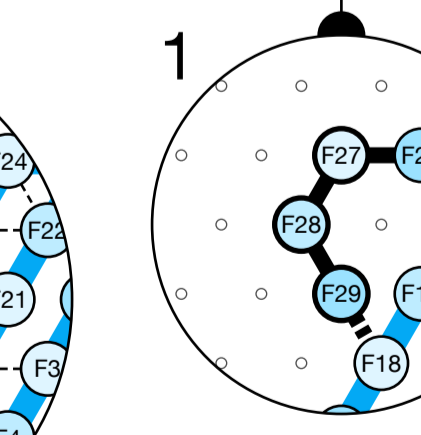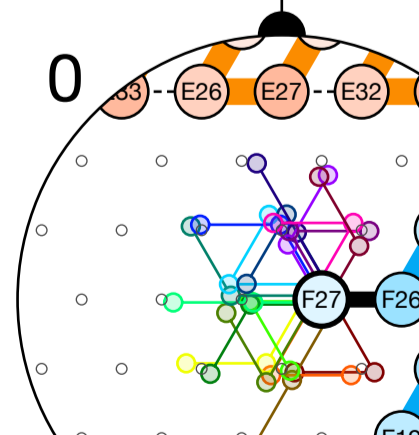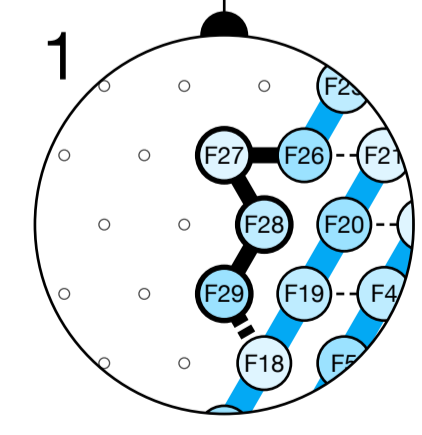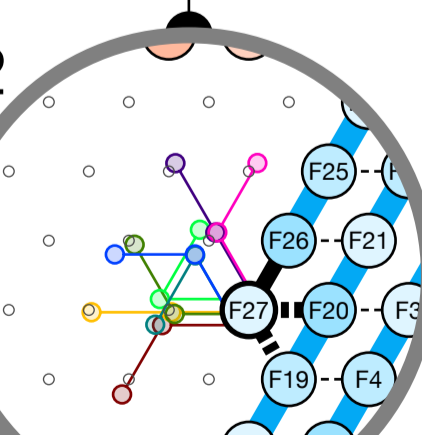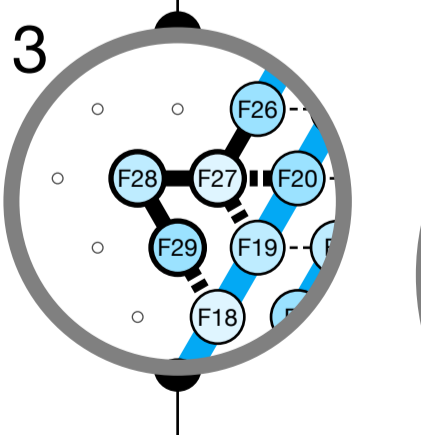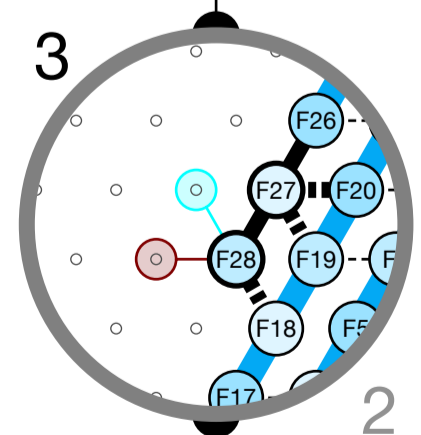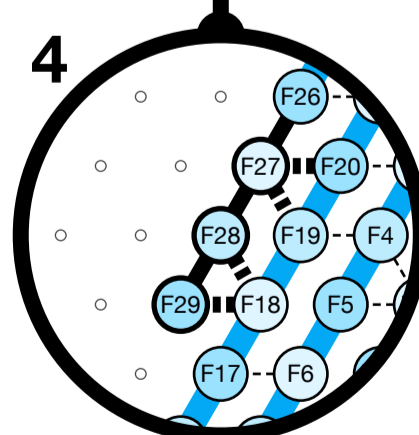

3957
E: Padding
Bead F28

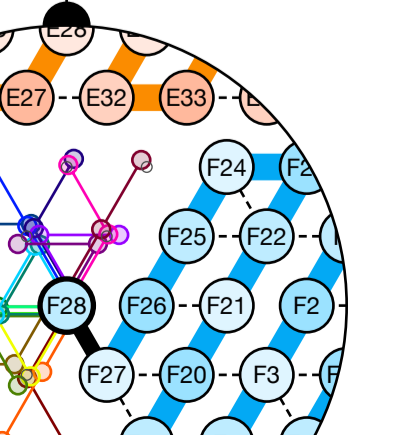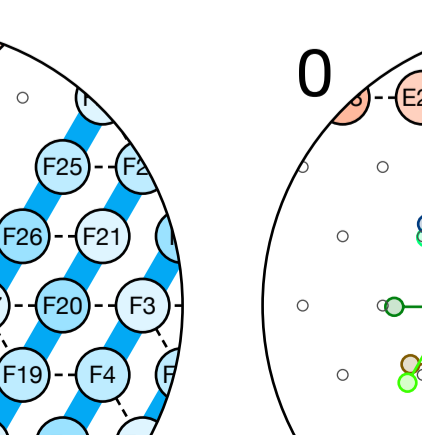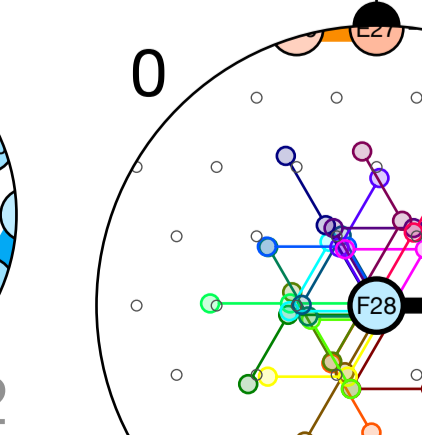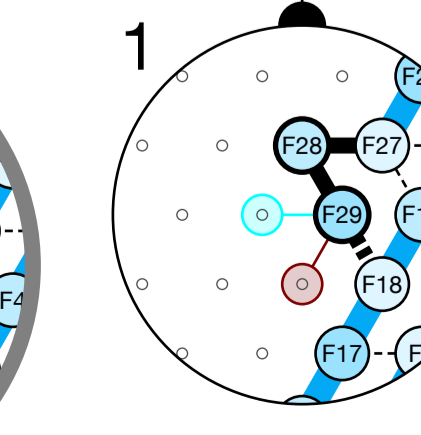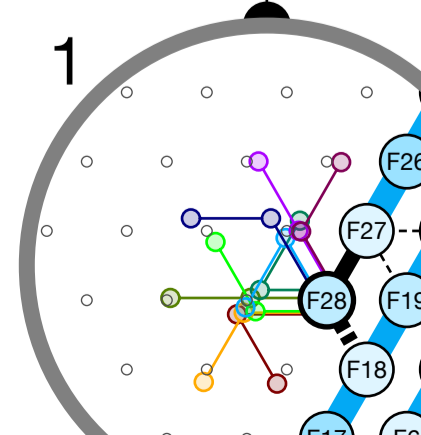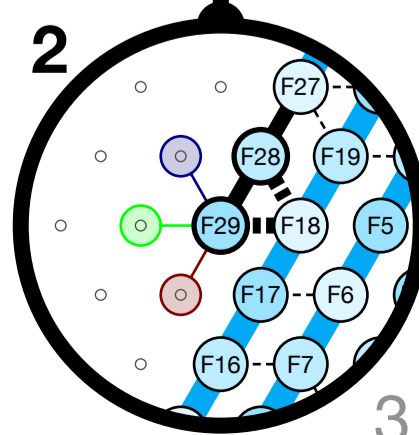

Next: # 0467